





45 min



Votre meuble se recycle.
Renseignez-vous auprès de
votre centre de tri.

2280/9

0817s35

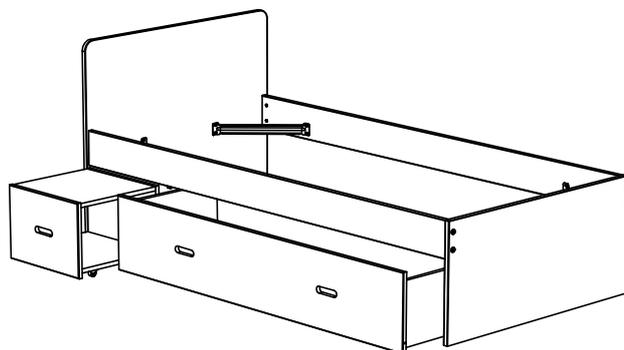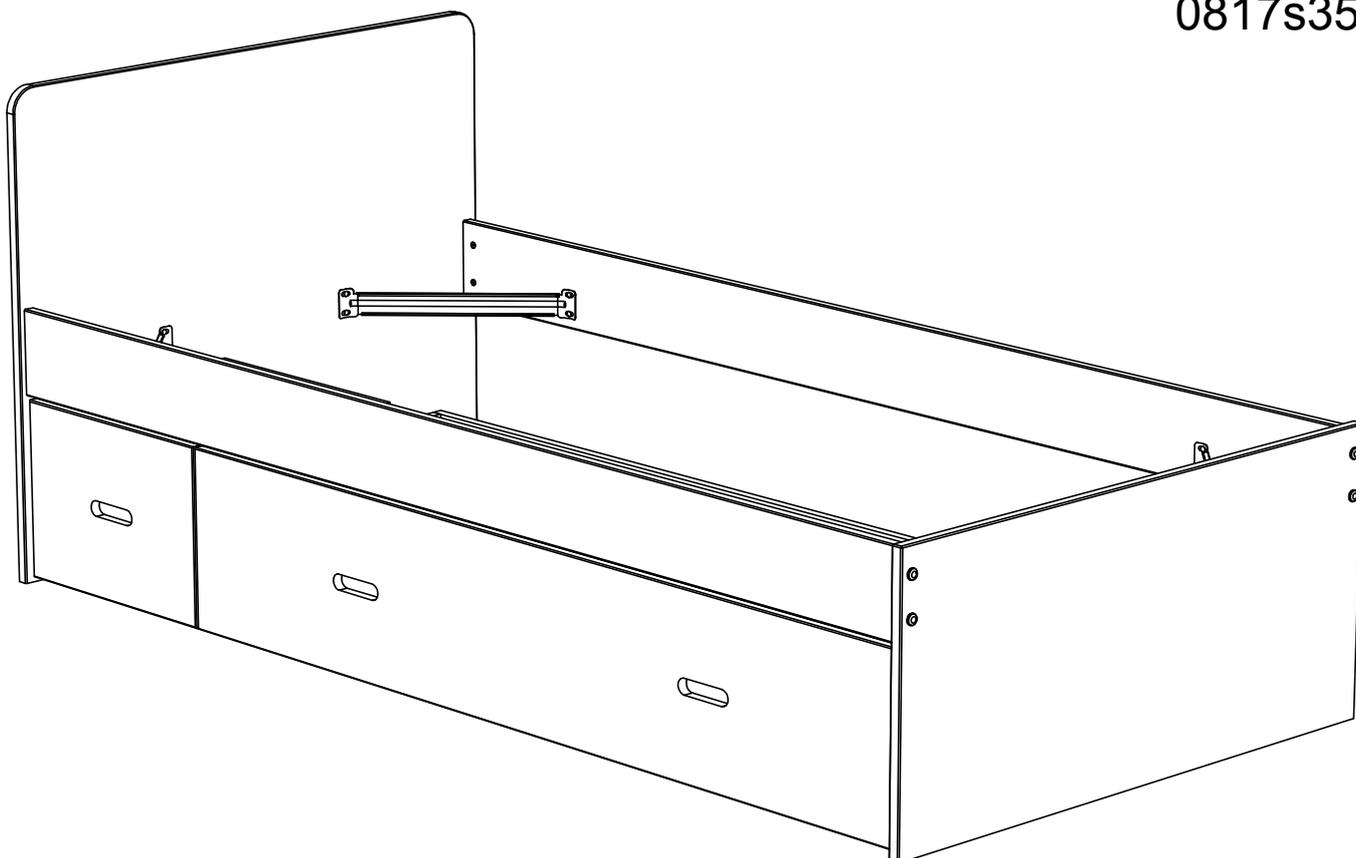


3 / 3



M6 x 60mm

A


8



Ø 10 x 35mm

B


4



Ø 8 x 30mm

C


14



Ø 4 x 40mm

E

4



TR Ø 4 x 16mm

G

16



L=35mm

H


12



Ø 15mm

I

12



M6

J

8




N

8




O

2




P

1

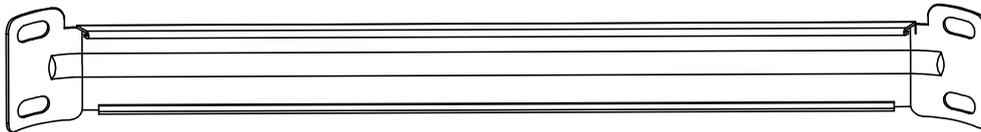

Q


4




Ø 6,3 x 14mm

R



16

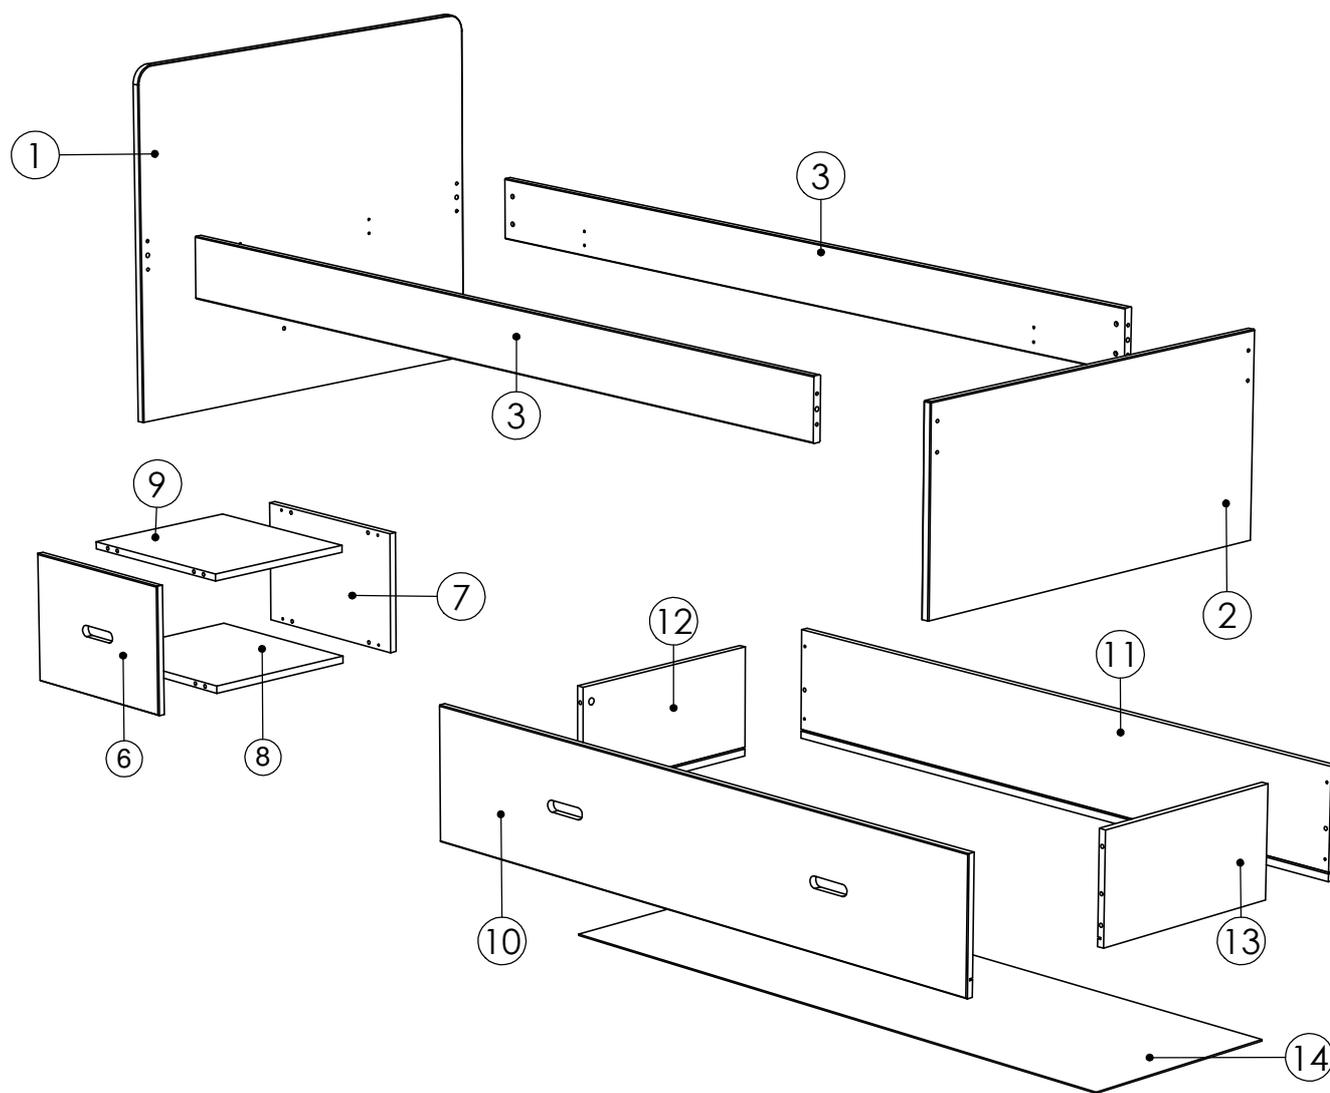

N° PIECE	QTE	Longueur	Largeur	Colis
1	1	800	960	1/3
2	1	450	960	1/3
3	2	1890/1990	140	2/3
6	1	400	290	3/3
7	1	400	273	3/3
9	1	398	367	3/3
8	1	398	367	3/3
10	1	1478/1578	290	3/3
11	1	1478/1578	240	3/3
12	1	470	240	3/3
13	1	470	240	3/3
14	1	1457/1557	484	3/3


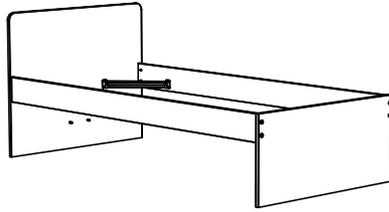


ETAPE 1

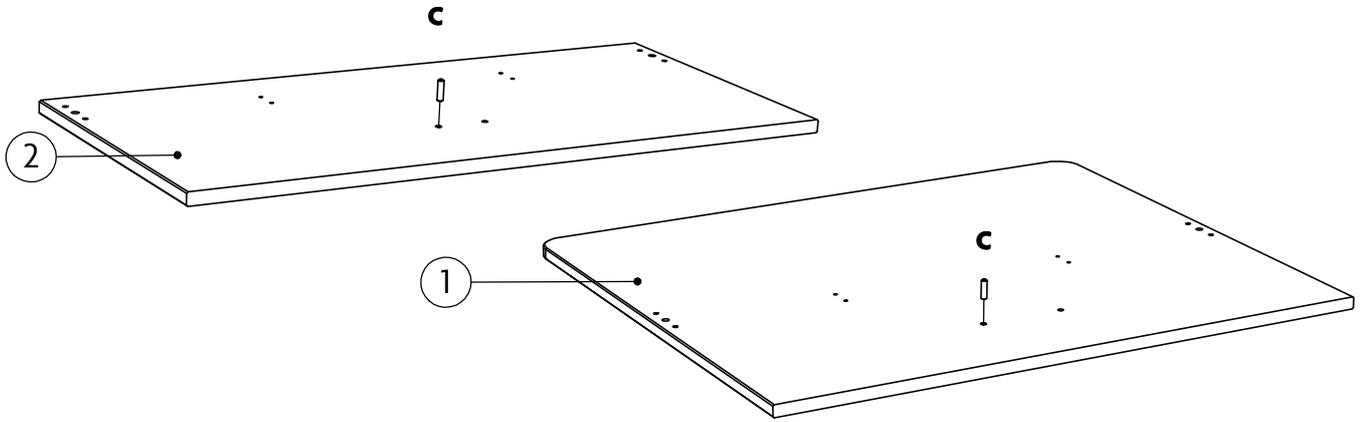



ETAPE 2

x2

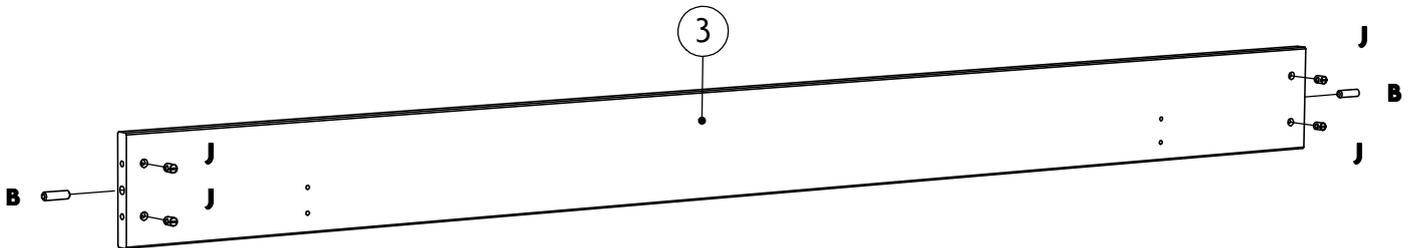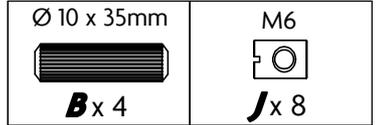

ETAPE 3

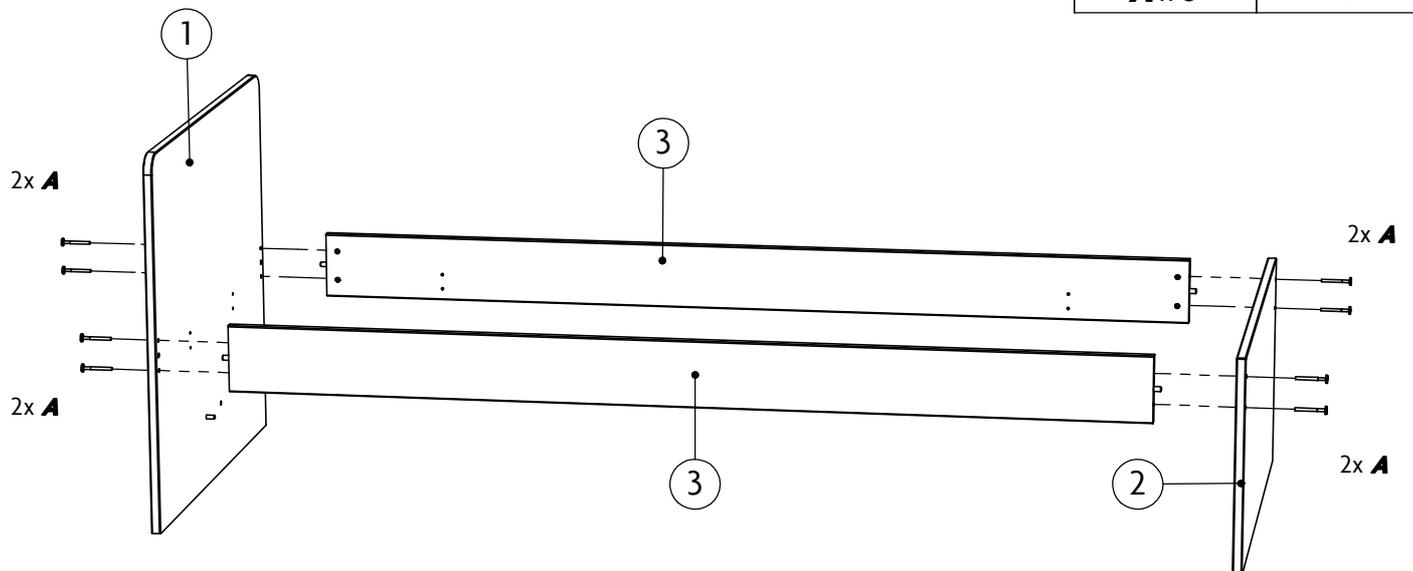

ETAPE 6

Ø 8 x 30mm



C x 8


TR Ø 4 x 16mm




G x 8



N x 4

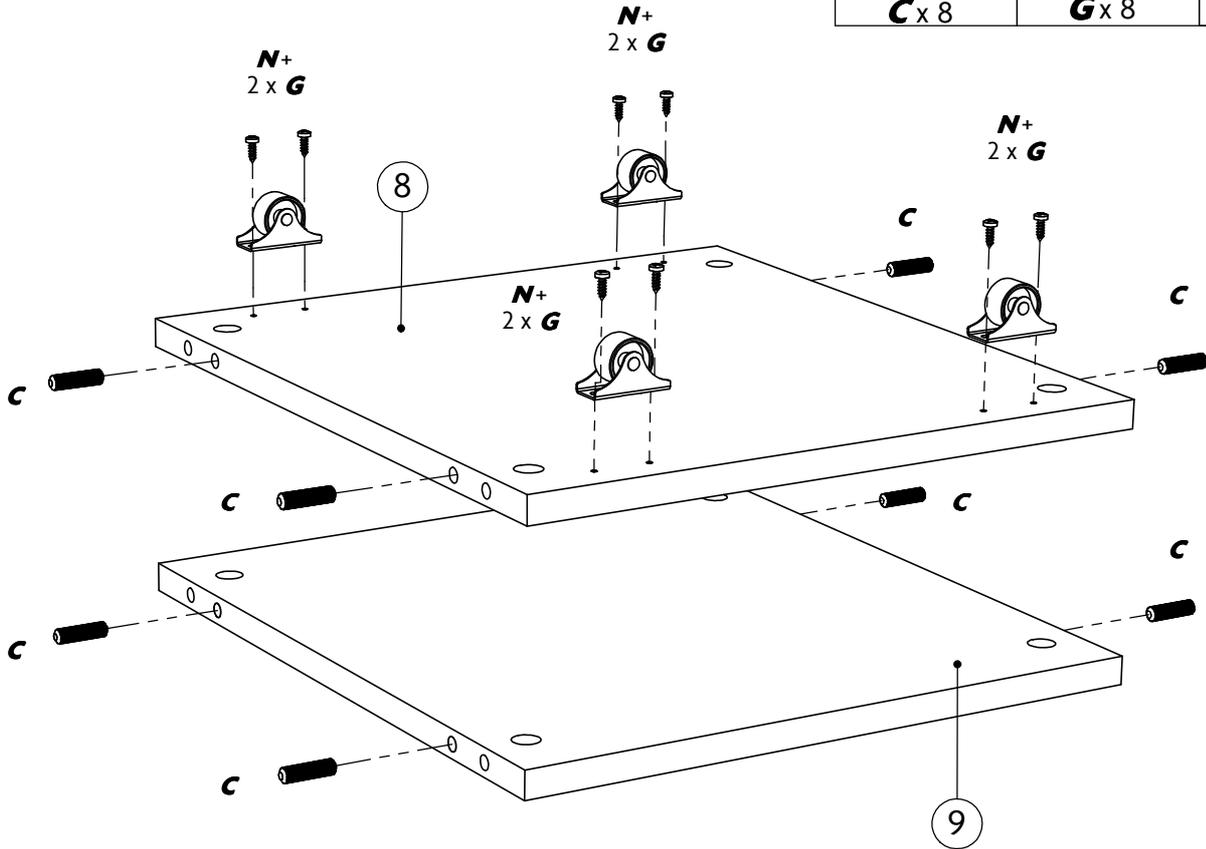

ETAPE 7

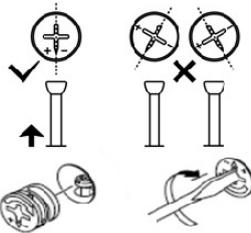


Avant de raccorder les excentriques, bien s'assurer que la position de départ est correcte avant d'insérer le boulon de connection.


Puis tourner dans le sens horaire jusqu'à la butée.

Ø 15mm



I x 8

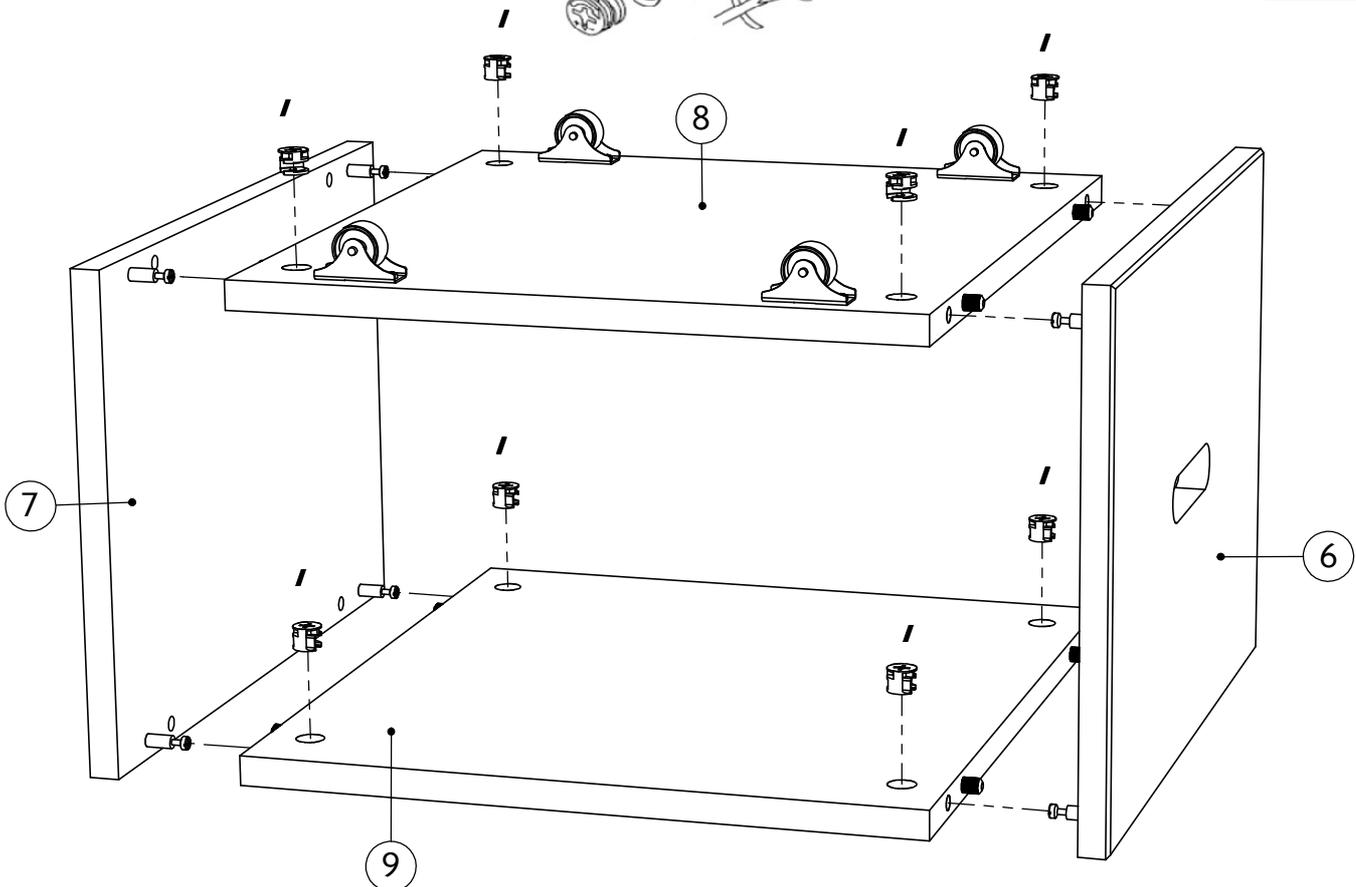

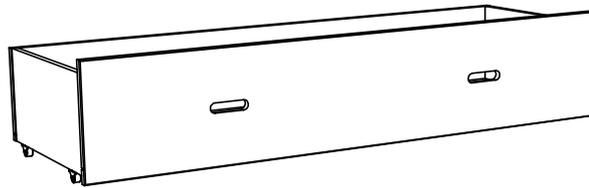

ETAPE 8

Ø 8 x 30mm



C x 4


TR Ø 4 x 16mm



G x 8



N x 4

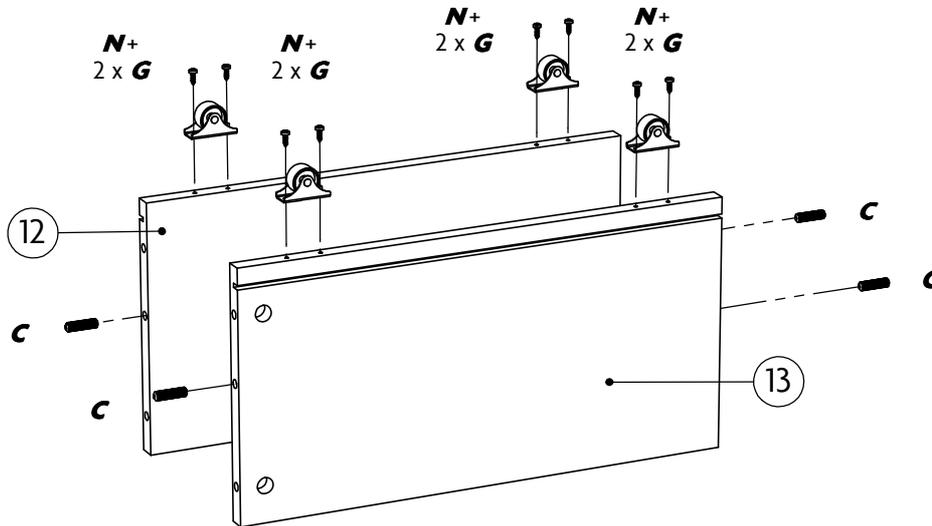


ETAPE 9

L=35mm



H x 4

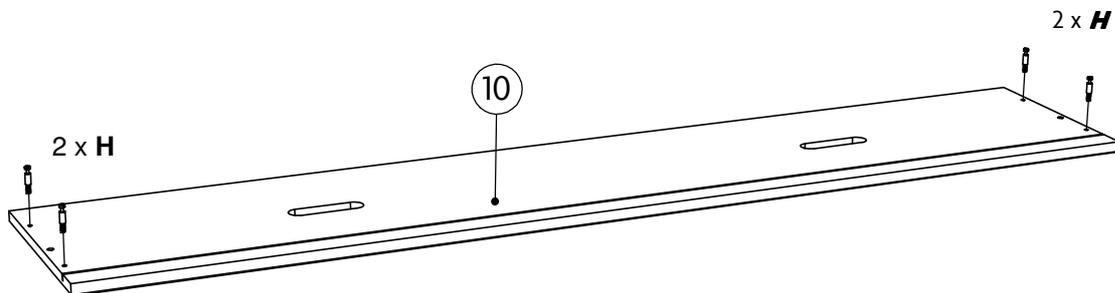


ETAPE 10


Ø 15mm




I x 4

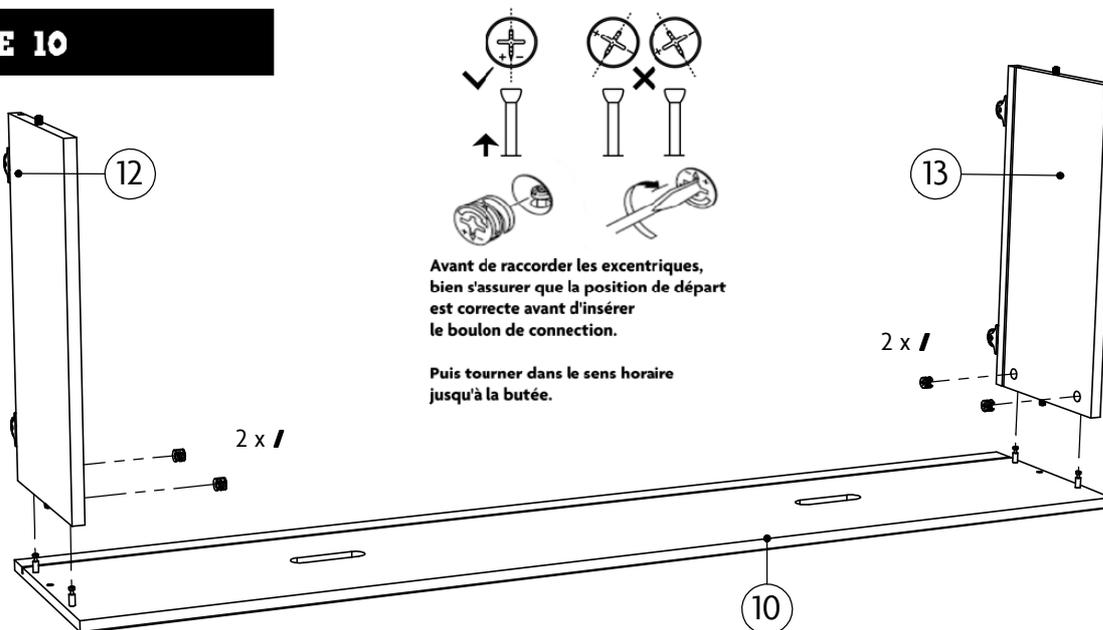



ETAPE 11

Ø 4 x 40mm

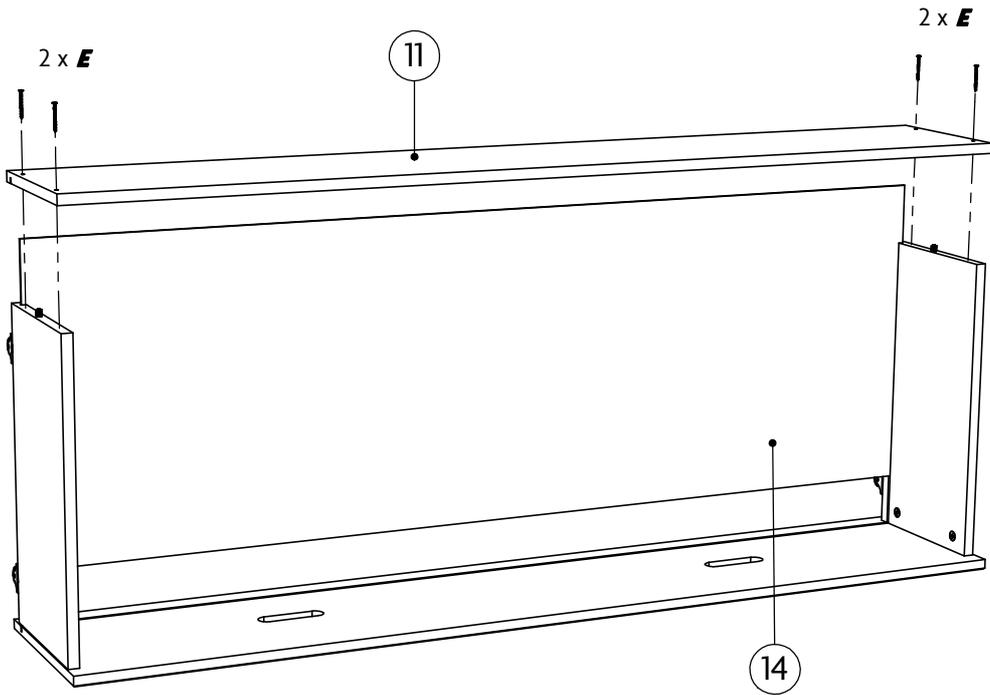E x 4



ETAPE 12

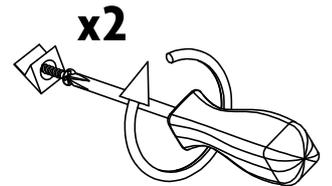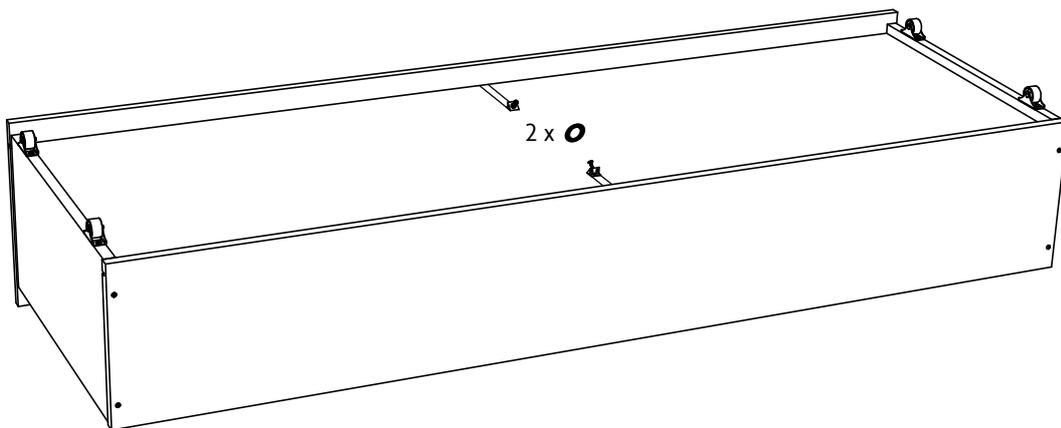
O x 2



ETAPE 13

